



Functions

- Max. resolution: 2MP (1920×1080)
- Wide field of view achieving doorway security monitoring
- Access control function
- Noise suppression and echo cancellation
- Support calling indoor station/APP
- Support door opening by swiping card or mobile APP
- Support IR and white LED light
- Support tampering alarm and door contact alarm
- 2.4G Wi-Fi
- Built-in micro SD card slot, up to 256GB
- Intelligent Analysis: video exception detection, face detection, face capture, etc.





 Download the SuperCam Plus App from the App Store or Play Store.












 Open up app. Go through the start up tips then select the MENU Icon.

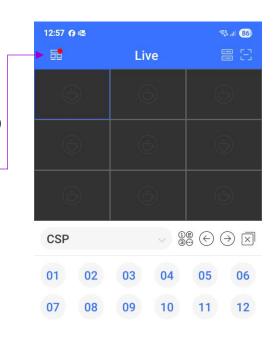


0


 \odot

 Select the Not logged in and create an account for the App.

Note: This is required when using the Intercom or Doorbell from TVT

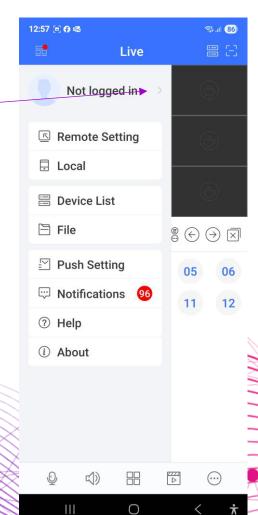




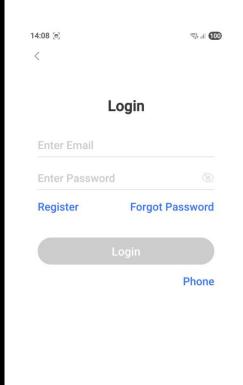


Other way to sign in

 Select Register, Agree to the Privacy Statement and create an account and select Register now.

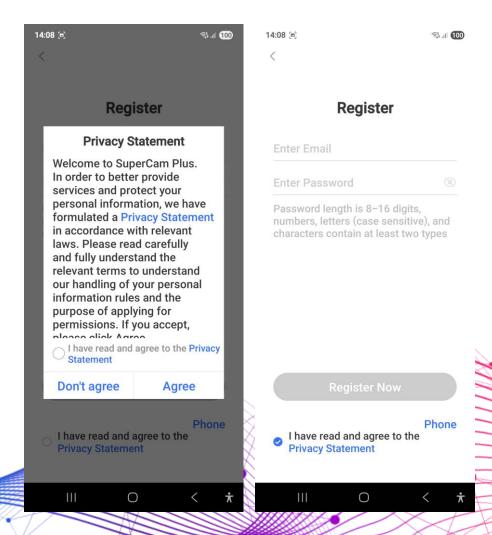




- Enter Graphic
 Code then select
 Get Code.
- Wait for an email with the verification number, enter the number and select finish.

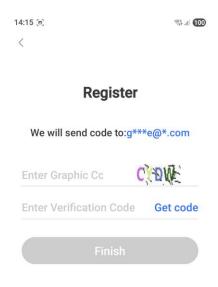


 Once successful, enter log in details and Login

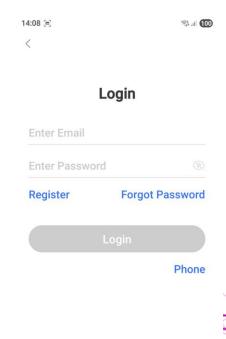







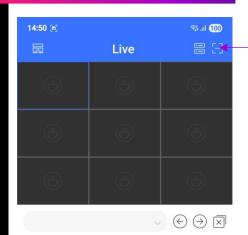


 Select the SCAN Icon and scan the QR code or if you have screenshot select the PIC Icon and choose the picture of the QR code.

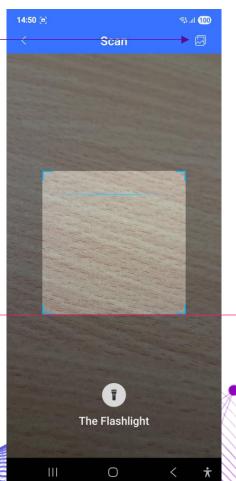

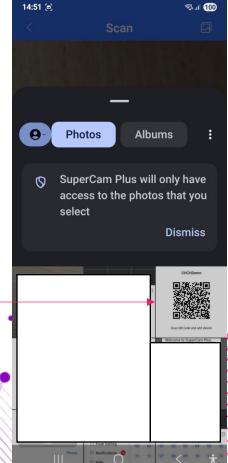




Mobile App Setup - WiFi

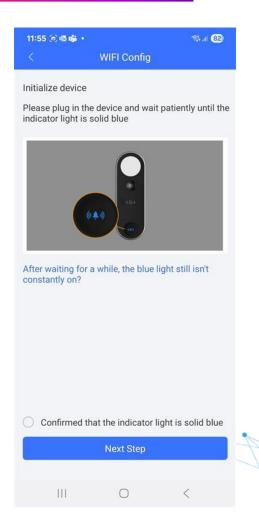

Follow to instructions on the screen – wait for BLUE light to be on solid on Doorbell and select **Next Step**


For WiFi – Enter the WiFi login details for the doorbell to connect with then select **Next Step**

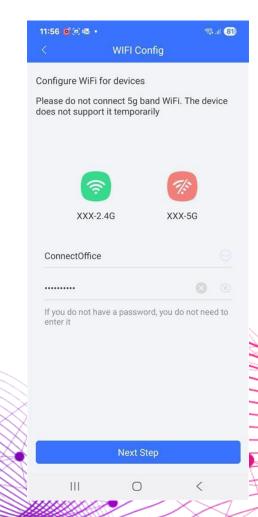






To Operate the door/lock, select the lock icon then select OK to open the door

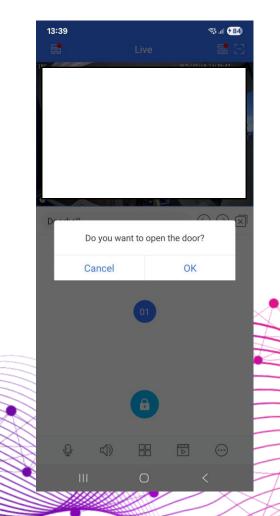



IP Tools PC


- Connect intercom to network with ethernet cable.
- Using TVT IPTools 3 find the Doorbell on the network and double click on IP address to web browse to configuration log in page.

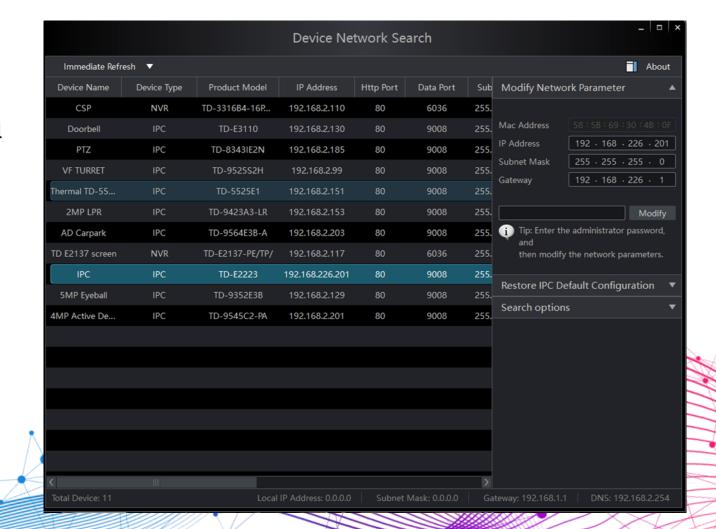

Device Setup Access Control Config Lock Time


Initial Setup – Activate Device Version dependant

Click on Already Read

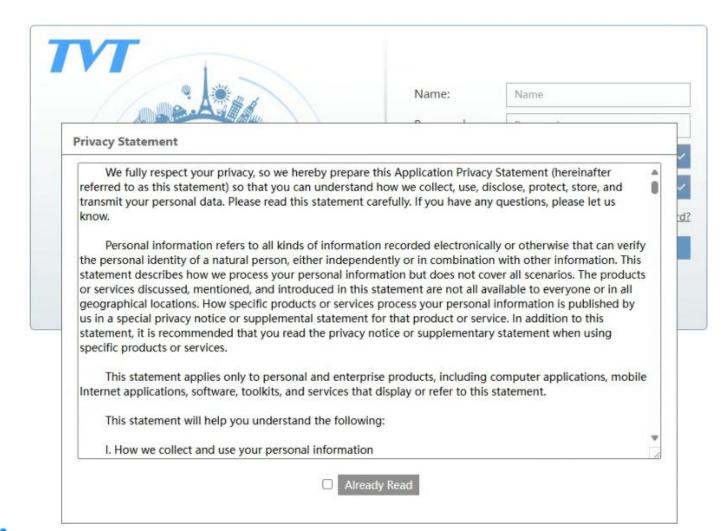


Initial Setup – Activate Device

 Create new password and complete the Security Questions.
 Click OK and then log back in using new credentials

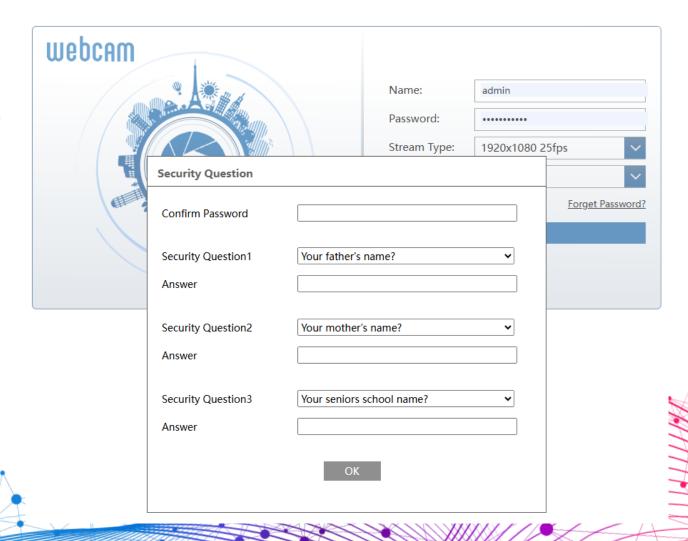

Config - Access Control

- Click on Config on main page
- Click on Access Control

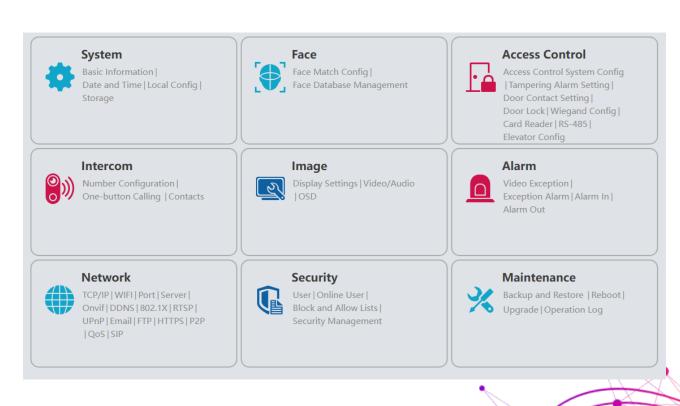




Access Control - Lock Settings

(a) Intercom

 Under the Access Control menu, select the sub menu Access Control System Config

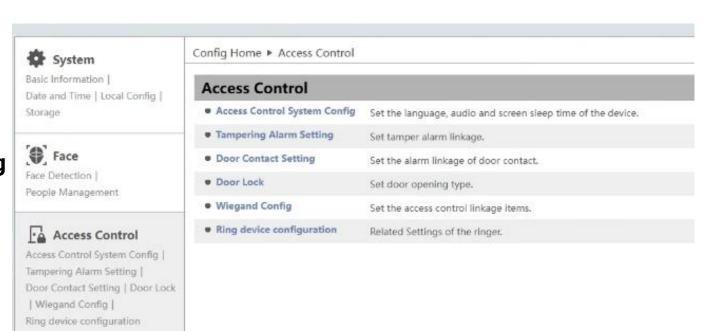






Access Control – Door Lock Settings

- Unlocking Group
 - Allow List
 - Visitor including Allow List
 - Stranger, inc Visitor and Allow List
- Unlocking delay Time Time before unlocking starts
- Unlock Duration Unlock Time
- Lock type Leave as default Auto

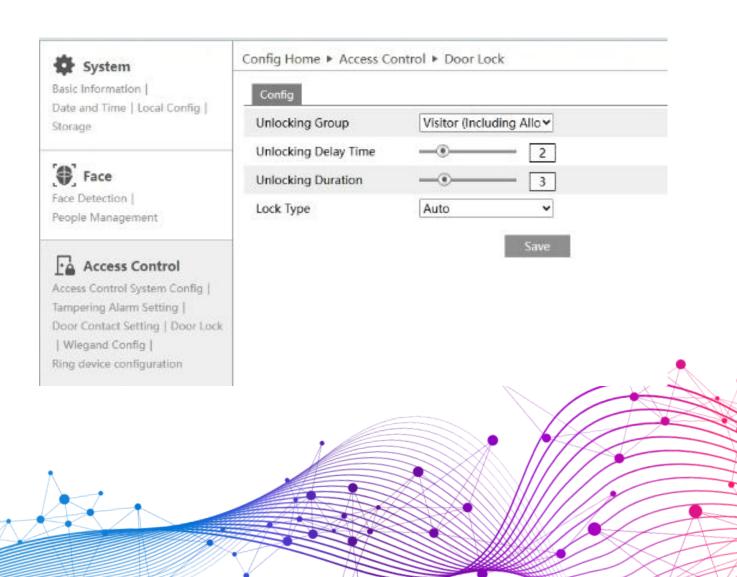




Intercom – Call Settings

Intercom
 One button Calling – Leave as default setting

Note: Make sure *Call platform* is enabled (Call App)

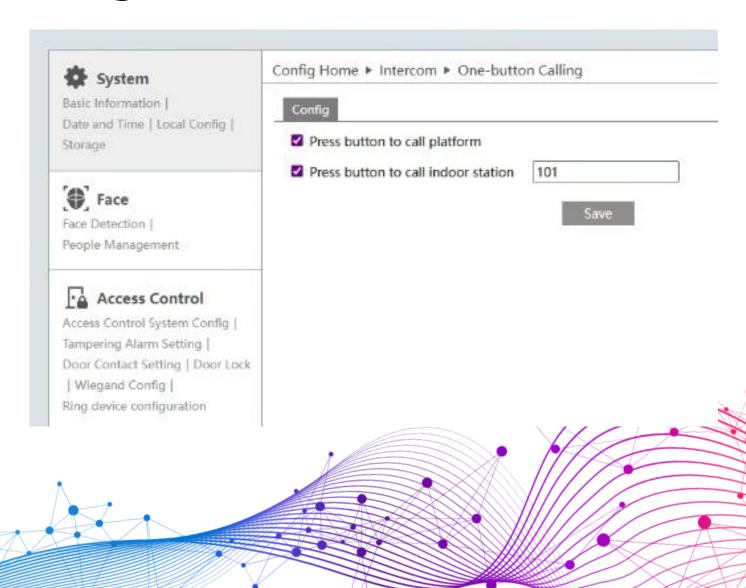



Mobile App









