 



Keyswitch Config on Solution 3000 panel

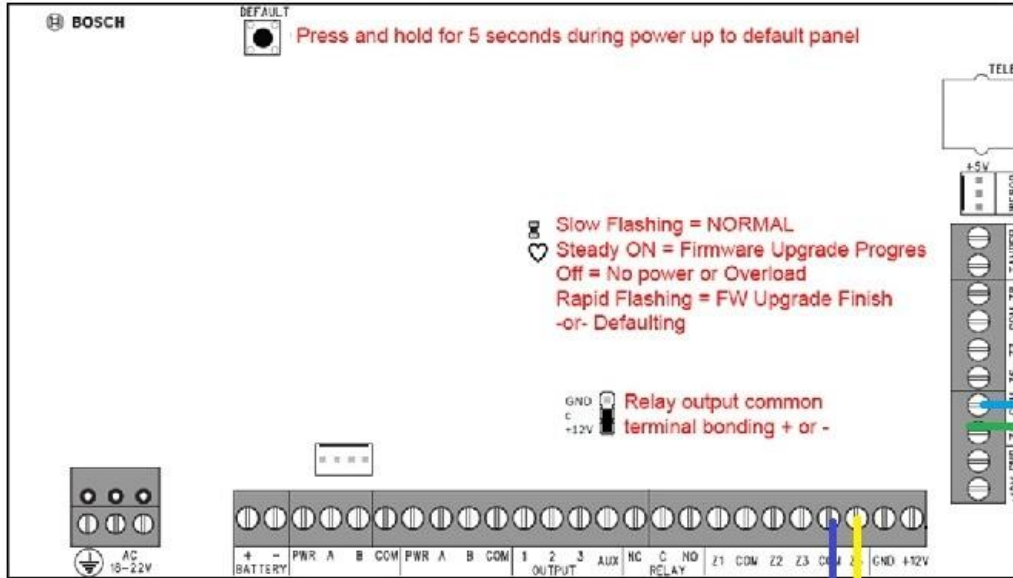

Programming example for latching keyswitch control on Zone 5

Loc 295 - 11 - Keyswitch

 
Loc 298 - 8 = Momentary AWAY arm/disarm **Replaces zone options 1**

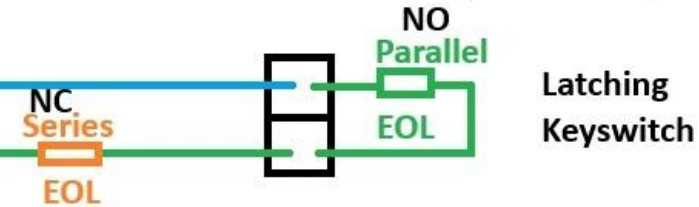

Programming example for momentary keyswitch control on Zone 4

Loc 288 - 11 = Keyswitch

Loc 291 - 0 = Latching AWAY arm/disarm **Replaces zone options 1**

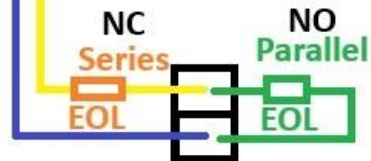

NC = Normally closed
NO = Normally open