



TVI Intercom Settle




Functions

- Calling App and/or Indoor Station
- 2MP camera
- 3.5 inch LCD screen
- Face detection / Face recognition
- 2 x doors of access
- Card reader built in Mifare/Desfire/FM1208/Gicard/EM card 13.56MHz & 125KHz
- Opening modes Pin,Card,Face
- Door open via App
- Door/Egress inputs for door monitoring and control
- Ethernet or 2.4GHz WiFi with 12v DC power input
- 10000 users/faces/cards
- IP67
- SD Card slot
- Adding users via Web/App
- 50000 events logged


Initial Setup – Activate Device

- Connect intercom to network with ethernet cable.
- Using TVT IPTools 3 find the intercom on the network and double click on IP address to web browse to configuration log in page.

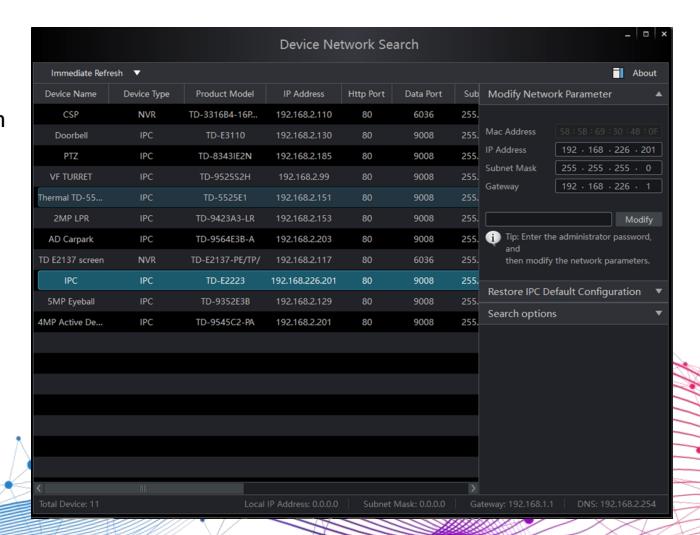


Initial Setup – Activate Device

Click on Already Read

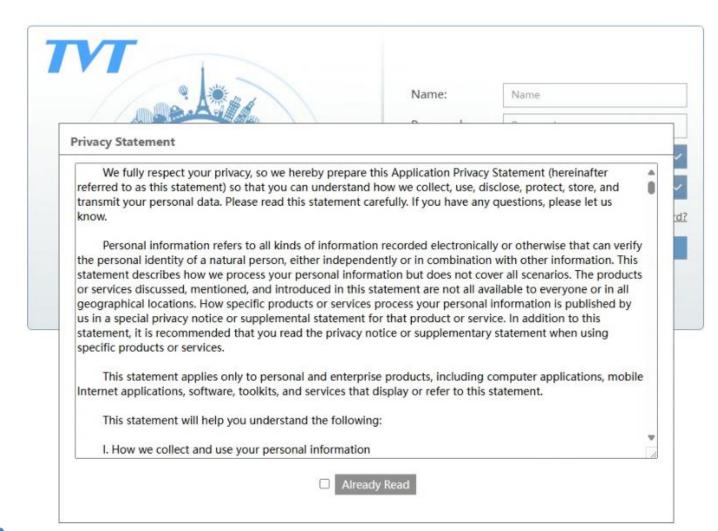


Initial Setup – Activate Device

 Create new password and complete the Security Questions.
 Click OK and then log back in using new credentials

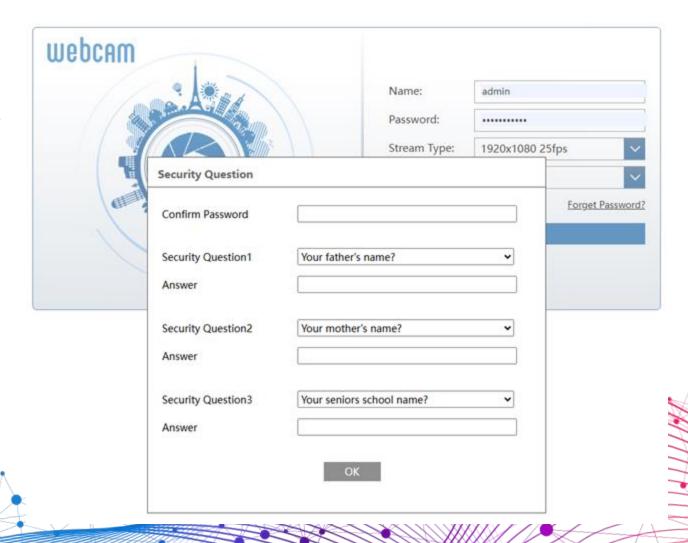


Network Connection – TCP/IP

 Click on Config/Network/TCP/IP

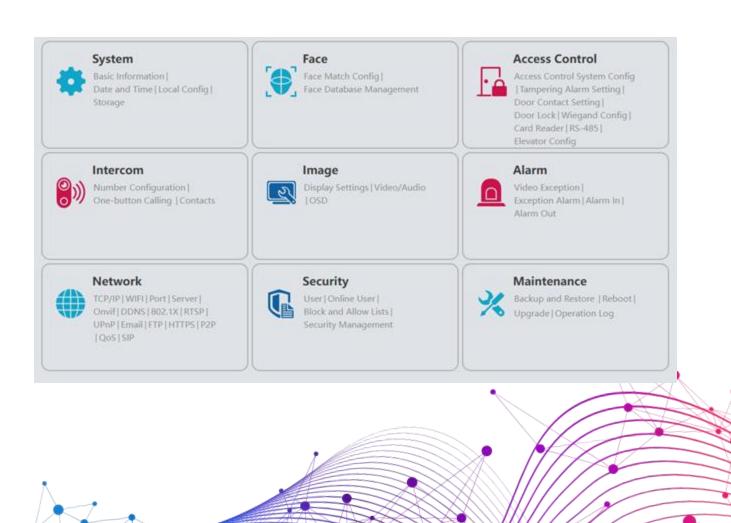


Network Connection – TCP/IP

- Select Automatic IP address or enter the IP address details manually.
- Close the Web browser and wait for the intercom to reassign the new IP address, then reconnect via the new IP address

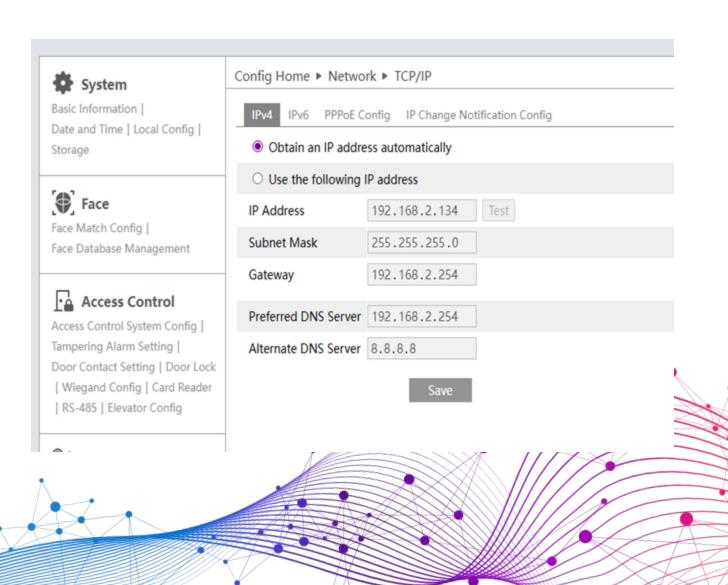


Network Connection - WiFi

 Click on Config/Network WiFi

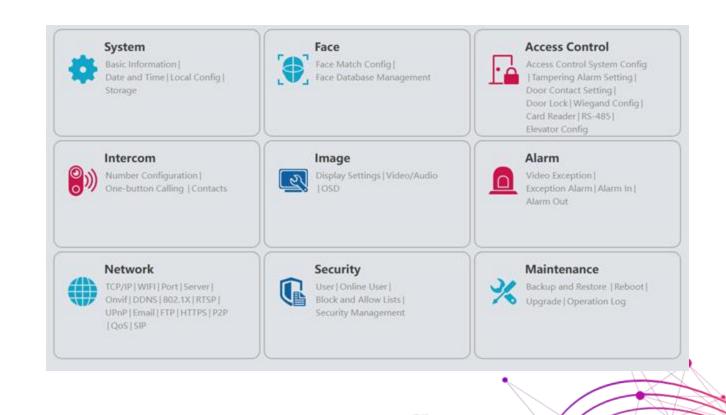


Network Connection - WiFi

- Select WiFi SSID and enter WiFi password
- Select IP address automatically or manually enter IP address for intercom
- Select SAVE and finished
- The Intercom will reboot and assign the new IP address

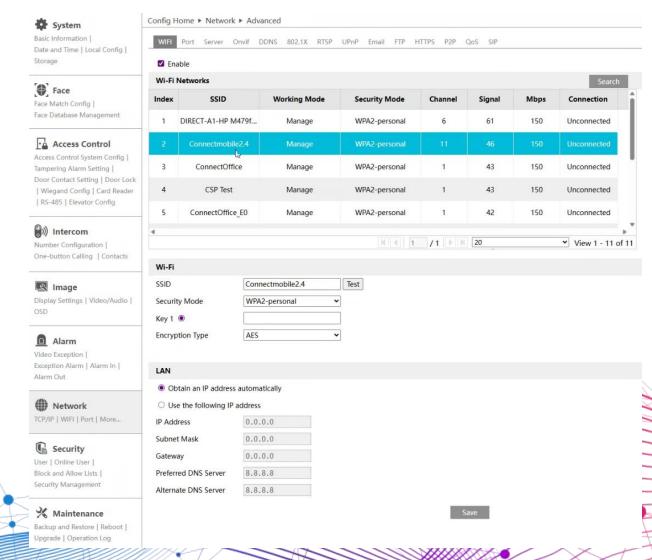


Access Control – Lock Settings

- Go to Config
- Access Control

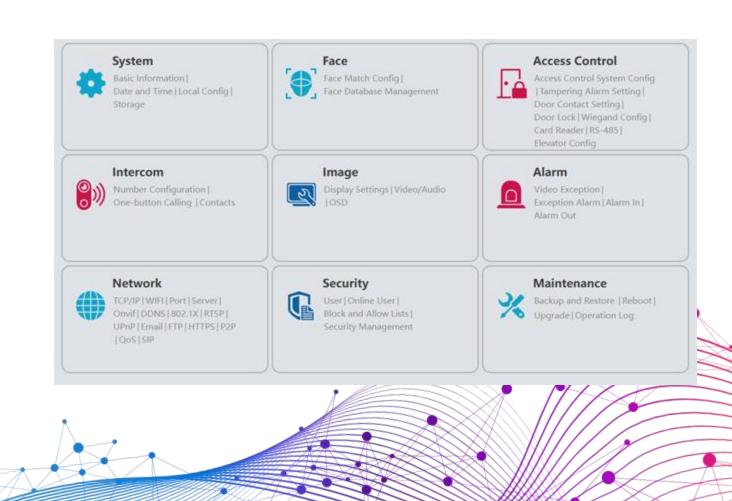


Access Control - Lock Settings

 Under the Access Control menu, select the sub menu Access Control System Config

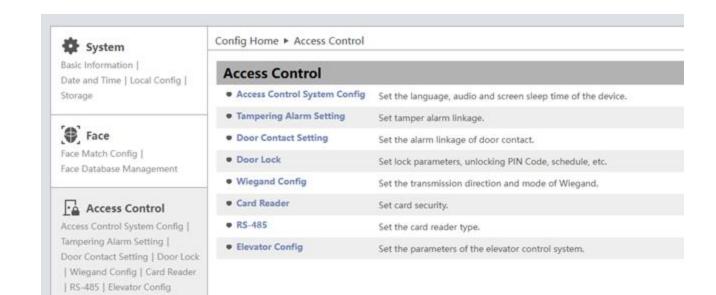


Access Control - Lock Settings

- Screen Sleep time Select the time that you want the screen to turn off.
- Volume of Speaker and screen brightness can be adjusted here

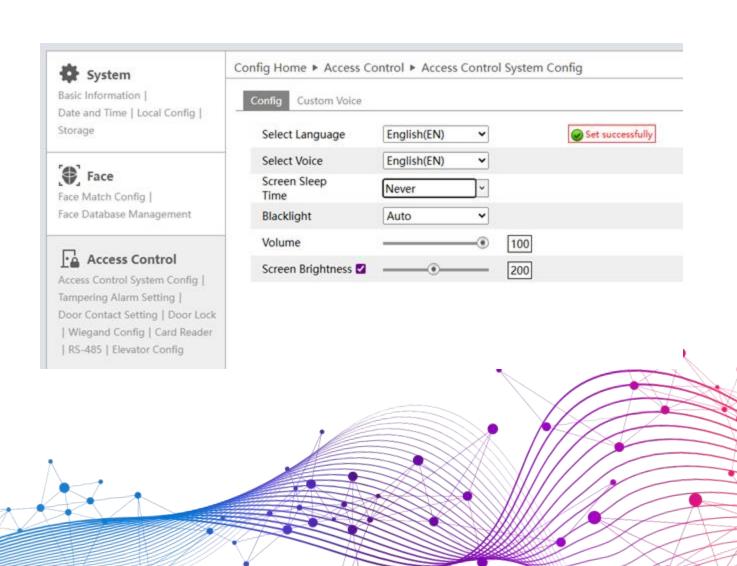


Access Control - Lock Settings

- Door Lock
- Name Name of Door
- Unlocking Group
 - 1. Allow List
 - 2. Visitor (including Allow list)
 - 3. Stranger (including Visitor and Allow list)
- Unlocking delay time Time before unlocks
- Unlocking Time Unlock Time duration
- Door lock setting Leave as default
 - 1. Auto default
 - 2. NO Normally open
 - 3. NC Normally closed

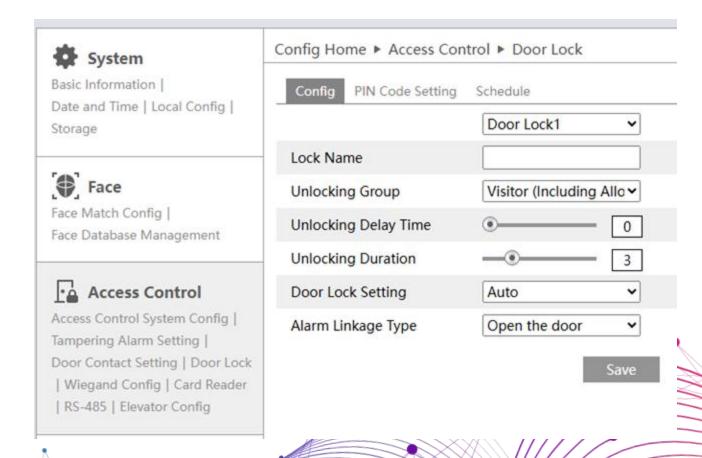

Intercom – Call Settings


Intercom
 One button Calling – Leave as default setting

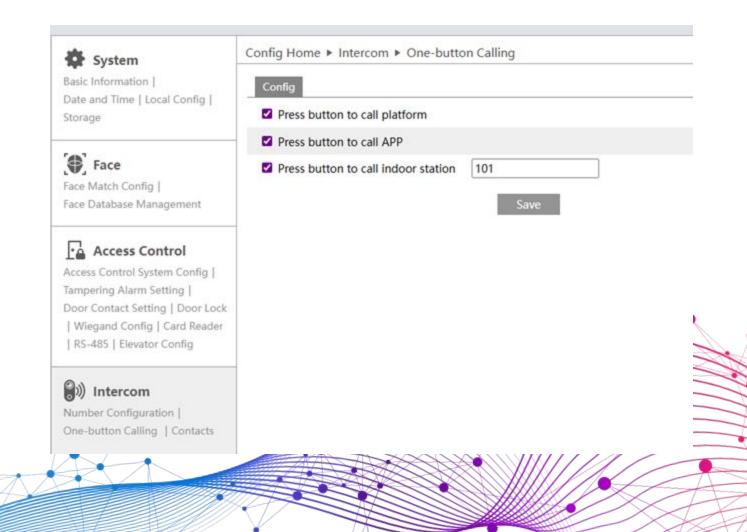

Face – Face Match Config

Detection Config


- When SD card is installed, select Trigger SD Card snapshot/Recording options
- Select SAVE when finished

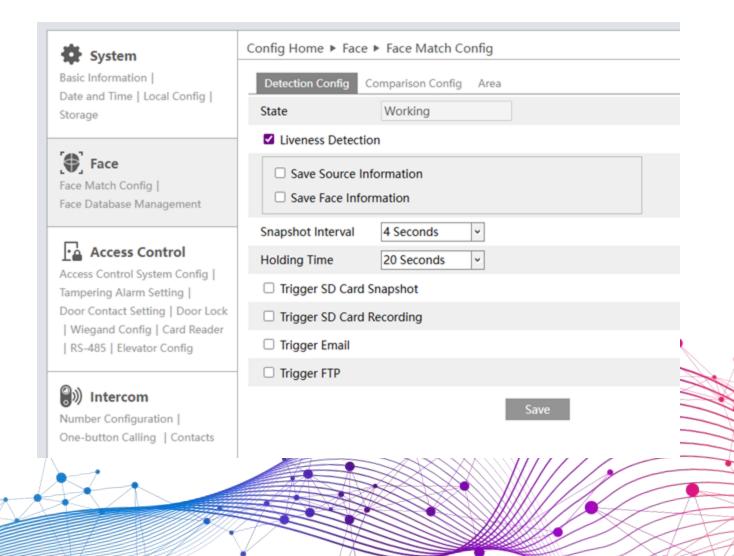

Face – Face Match Config

Comparison Config

- Change the threshold if higher accuracy is required
- Save when finished

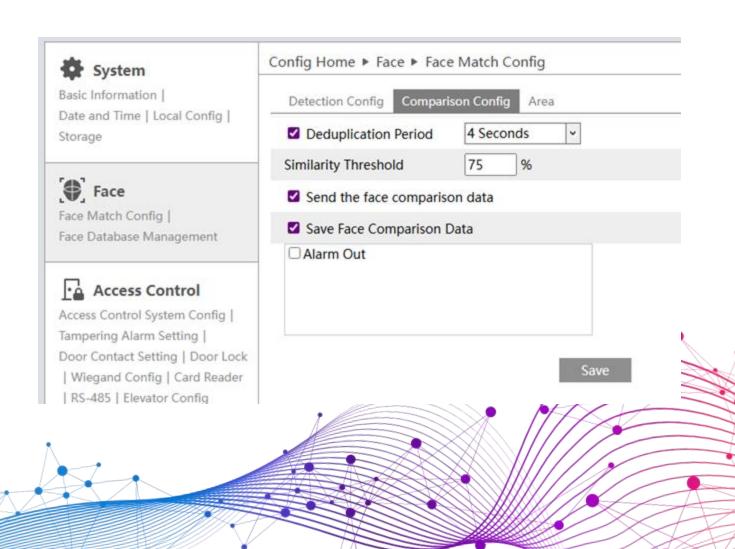



• Download the SuperCam Plus App from the App Store or Play Store.










 Open up app. Go through the start up tips then select the MENU Icon.

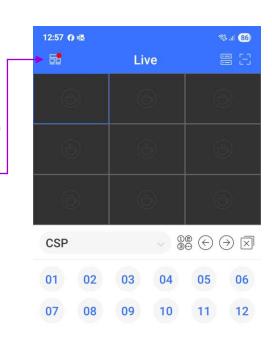



0

 \odot


 Select the Not logged in and create an account for the App.

Note: This is required when using the Intercom or Doorbell from TVT

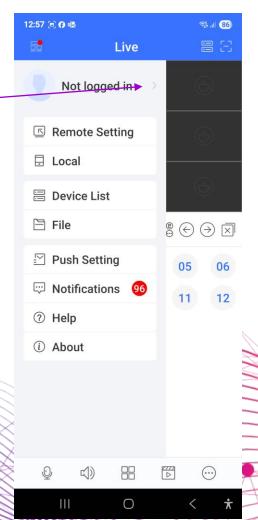


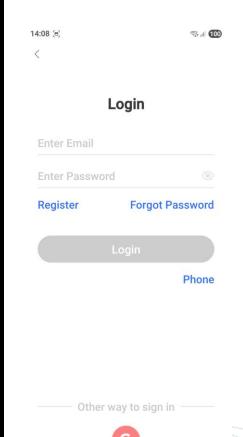


 Select Register, Agree to the Privacy Statement and create an account and select Register now.

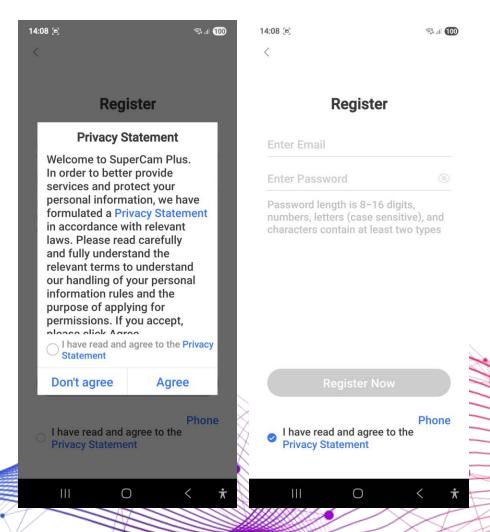



- Enter Graphic
 Code then select
 Get Code.
- Wait for an email with the verification number, enter the number and select finish.

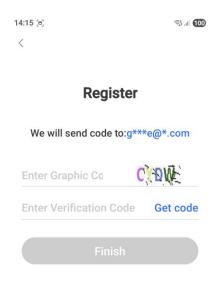



 Once successful, enter log in details and Login

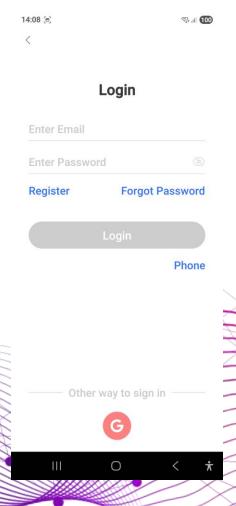

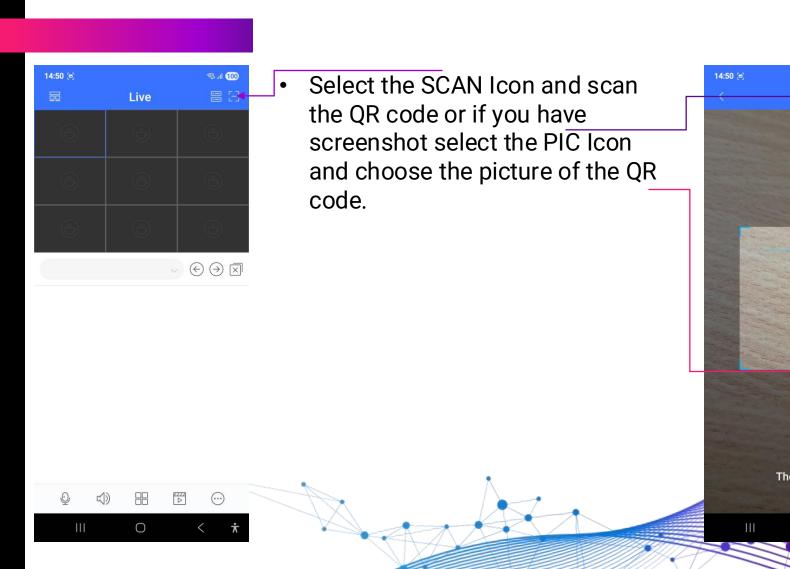

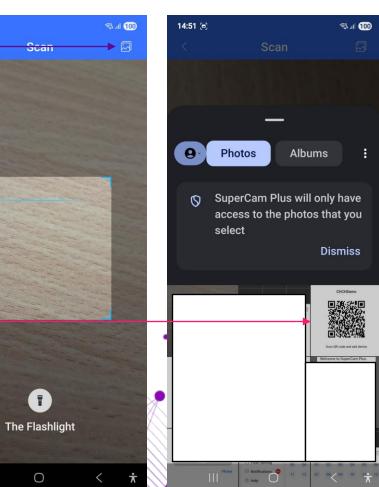

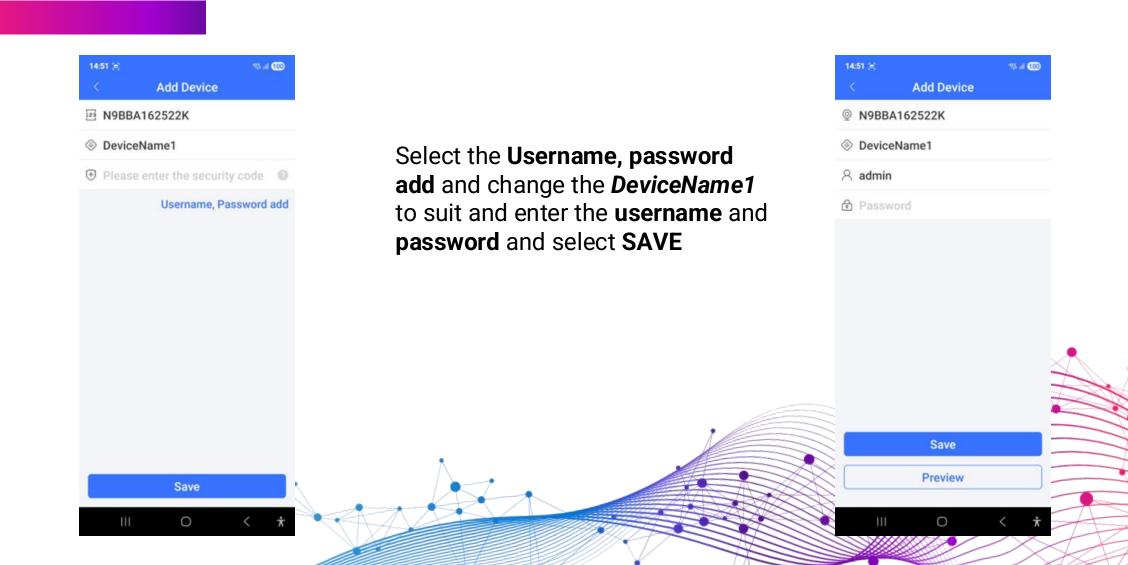

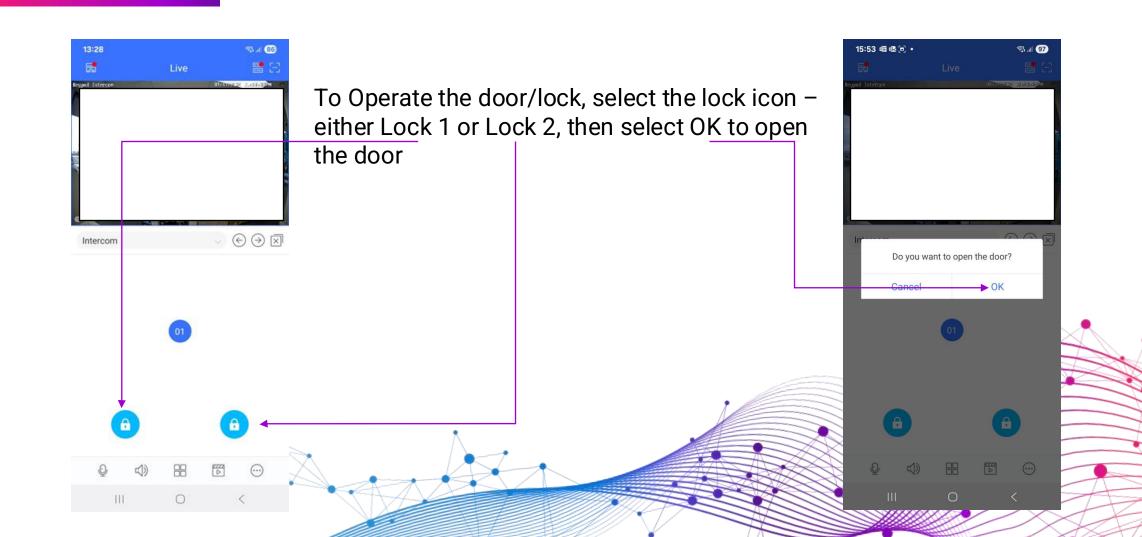


Face / User Database Management

 Web Browser / IP connection – Local Network Connection

Mobile App – SuperCam Plus


Face

- 1. Face Match Config -
- 2. Face Database management

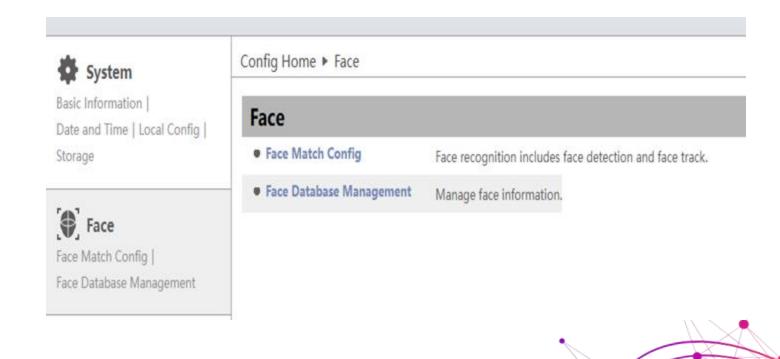


Face Database Management

 Select the Add person symbol to add new users

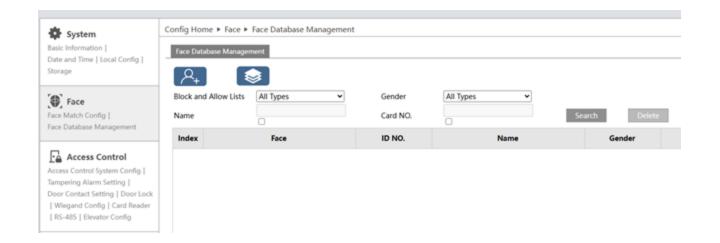





- **ID NO**. User number location 1 10000
- List Type Select the list type required
 - 1. Visitor
 - 2. Allow List
 - 3. Block List
 - 4. Administrator
- Card Number If using card access, click on Card NO. and present card at intercom.
 This will show the access cards details.
- Pin Code Enter access pin for user

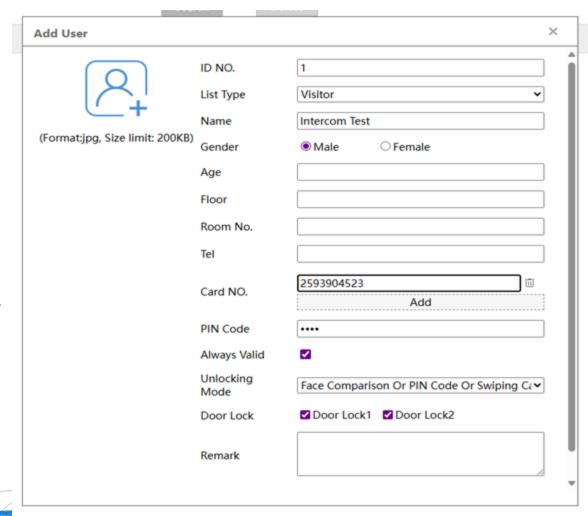


 Always Valid – Unselect if a one time schedule is required. Enter Start and End time details

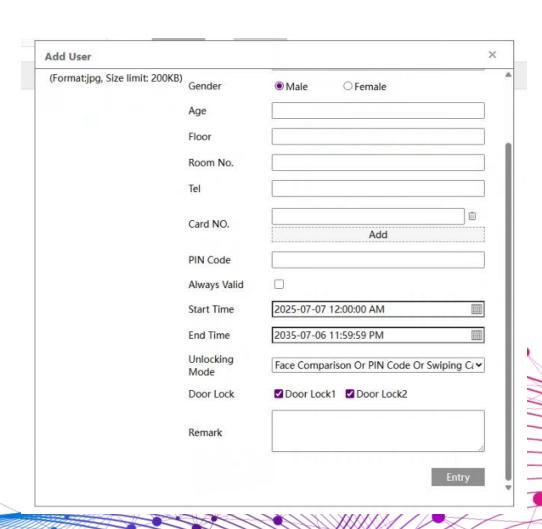


 Unlocking Mode – Select the unlock mode required

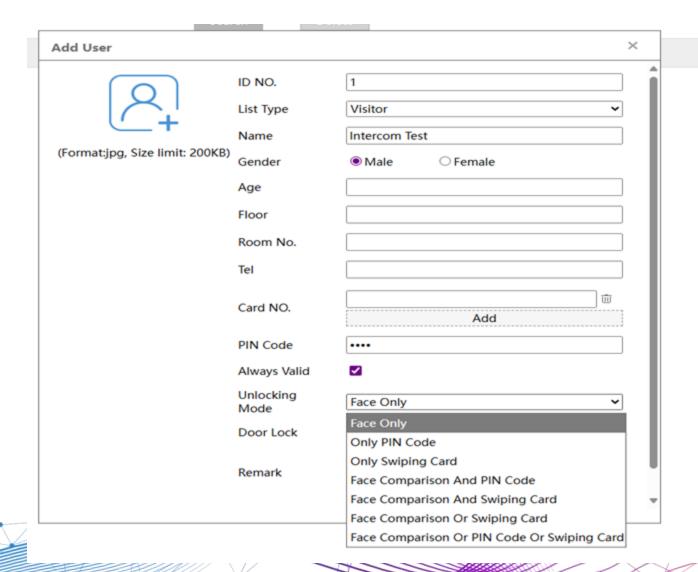


When complete select ENTRY to save

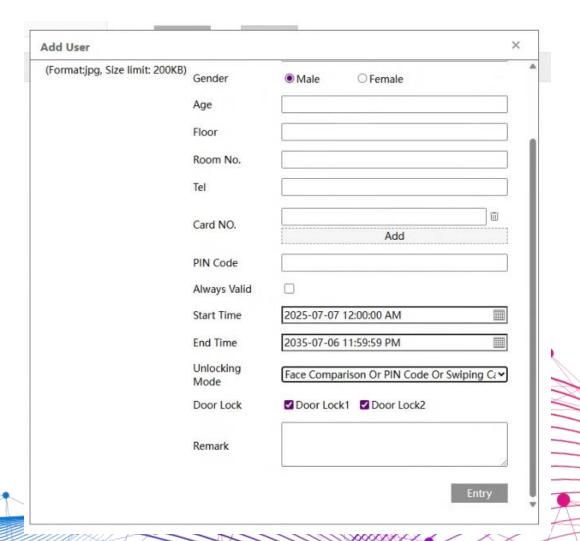

Face/User Management - Mobile App

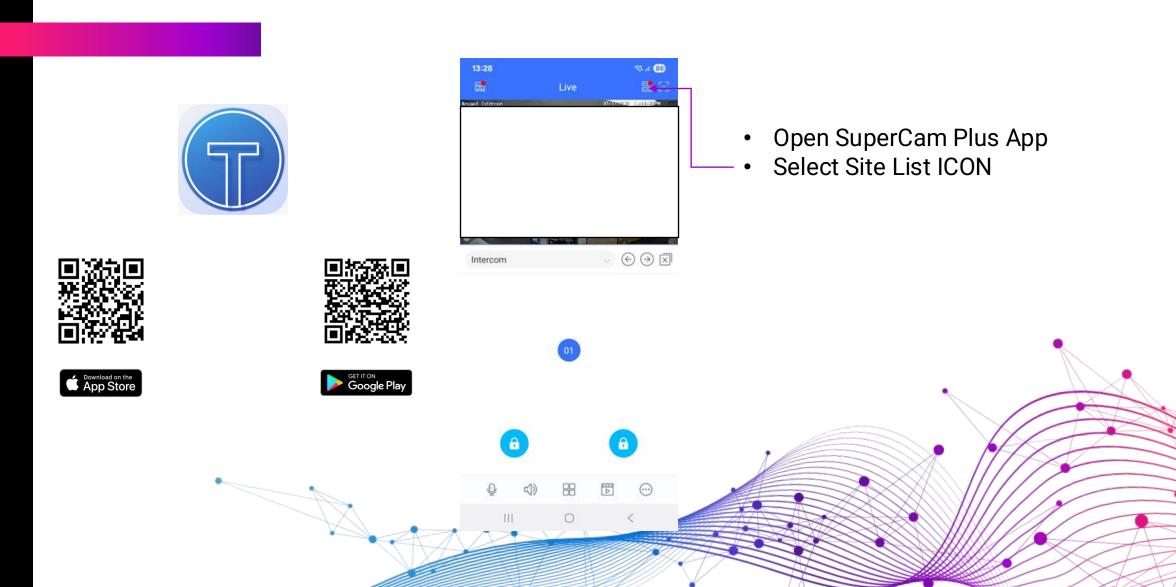


Face/User Management – Mobile App

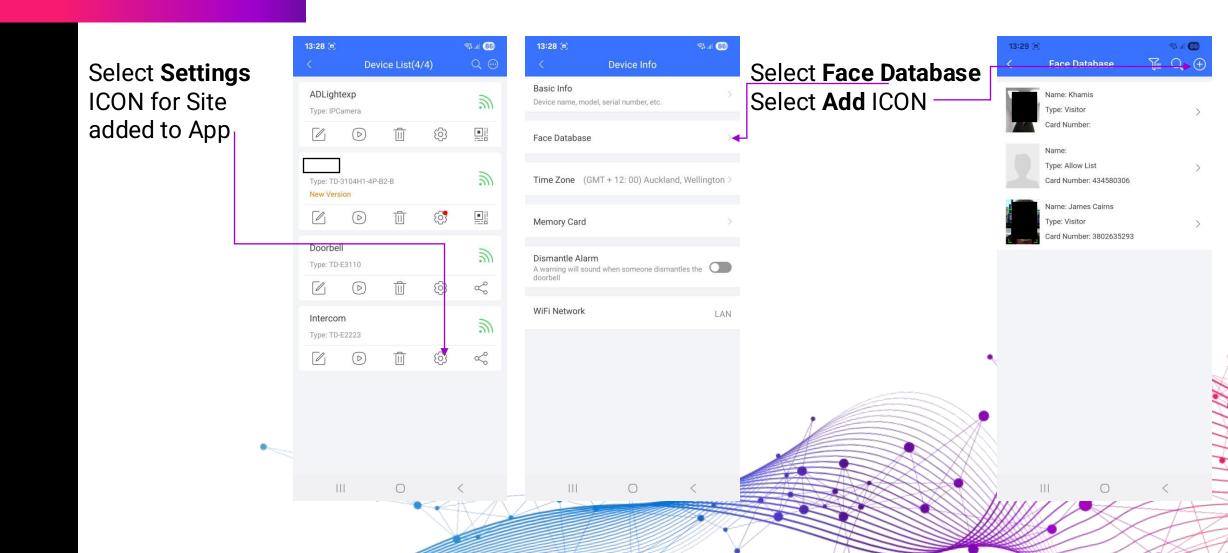

Face/User Management - Mobile App

Complete all required details for user setup.


- User Type
- ID No
- Name
- Unlocking Mode
- Card, Pin, Face
- Door lock Lock 1 or 2, or both

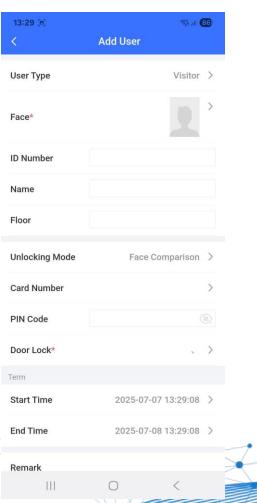

User Type

- Visitor Start and finish dates required
- Allow List, Block List, Admin
 - Term of Validity
 - Always Valid or Custom-

If **User Type** is change from Visitor you can have permanent access by changing **Term of Validity** to **Always Valid**

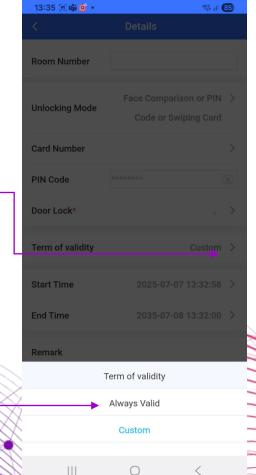


Face/User Management - Mobile App

Please note: The Card number can only be entered manually. Auto add card number is not available.


Some access cards/tags have ID numbers which relates to the Card Identification number. Some cards/tags only show batch or manufacture numbers.

Please check with you distributor

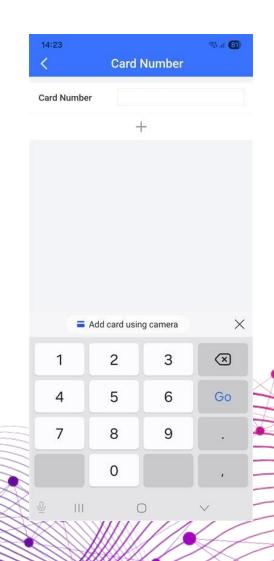


Face/User Management – Mobile App

Face – Adding faces to intercom system. Select the **Face** Icon

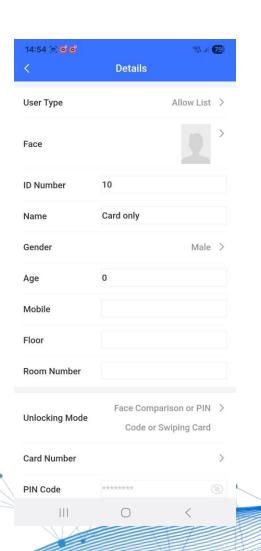


- Take photo of face.
- Make sure the face is within the frame. Use the camera switch icon to suit the snapshot that you require.
- Take snapshot.

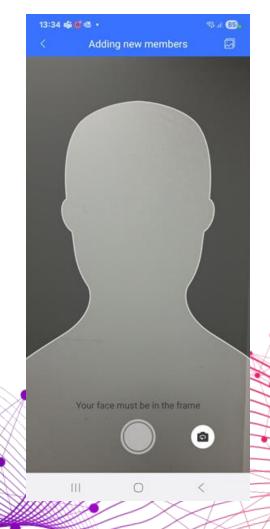

Face/User Management - Mobile App

 Once completed select Confirm to save

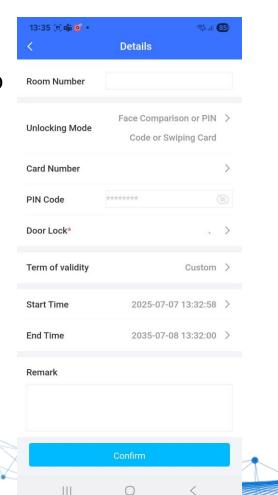

 To delete a user, swipe on the user. Select the BIN icon to delete the User

